




3. Description of the controls

3.1 Front panel

All the dishwasher controls are grouped on the front panel, which is of different shape depending on the model.

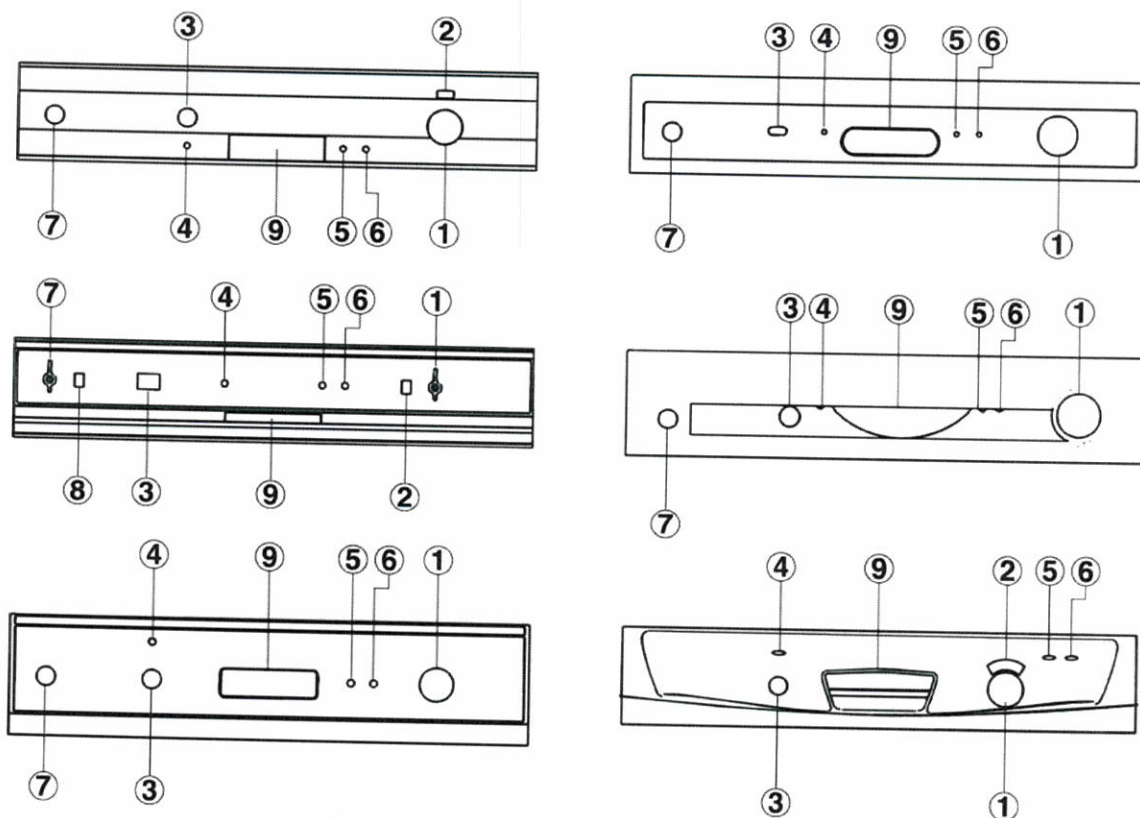

- 1 **WASHING PROGRAM SELECTOR**
- 2 **SELECTED PROGRAM INDICATOR DISC** (certain models only)
- 3 **ON/OFF KEY**
- 4 **POWER ON LIGHT**
- 5 **SALT WARNING LIGHT** (certain models only)
- 6 **RINSE AID WARNING LIGHT** (certain models only)
- 7 **SELECTOR SWITCH FOR DELAYED START FROM 1 TO 12 HOURS** (certain models only)
- 8 **DELAYED START INDICATOR DISC** (certain models only)
- 9 **RECESSED DOOR HANDLE**

SETTING THE WASHING PROGRAM

To select the most suitable washing program, refer to the table below which indicates the recommended washing according to dish type and the degree of soiling.

After using the table to identify the most appropriate washing program, turn the **PROGRAM SELECTION** knob (1) to set the program of choice by aligning the pointer with the program number. If the appliance is fitted with the selected program indicator disc, this will show the number of the program set.



User instructions

GB

TABLE OF PROGRAMS (4 program models)

CYCLE	SWITCH	TYPE AND DEGREE OF DIRT ON DISHES	AMOUNT OF DETERGENT	PROGRAM SEQUENCE					DURATION	CONSUMPTION	
			GRAMS	PREWASH	WASH	COLD RINSE	HOT RINSE	DRYING	MINUTES (2)	WATER LITRES (1)	POWER KWh (2)
SOAK	1	PANS AND DISHES PENDING COMPLETION OF THE LOAD	—	COLD	—	—	—	—	6'	4	—
INTENSIVE 65°C	2	VERY DIRTY PANS AND DISHES, EVEN WITH DRIED-ON DIRT	30	COLD	65°C	2	65°C	YES	90'	22	1,55
NORMAL 60°C (*) EN 50242	3	PANS AND DISHES WITH NORMAL DIRT	30	COLD	60°C	1	65°C	YES	80'	18	1,4
RINSE	4	DISHES FOR RINSING AND DRYING	—	—	—	1	65°C	YES	45'	9	0,8

TABLE OF PROGRAMS (5 program models)

CYCLE	SWITCH	TYPE AND DEGREE OF DIRT ON DISHES	AMOUNT OF DETERGENT	PROGRAM SEQUENCE					DURATION	CONSUMPTION	
			GRAMS	PREWASH	WASH	COLD RINSE	HOT RINSE	DRYING	MINUTES (2)	WATER LITRES (1)	POWER KWh (2)
SOAK	1	PANS AND DISHES PENDING COMPLETION OF THE LOAD	—	COLD	—	—	—	—	6'	4	—
INTENSIVE 65°C	2	VERY DIRTY PANS AND DISHES, EVEN WITH DRIED-ON DIRT	30	COLD	65°C	2	65°C	YES	90'	22	1,55
NORMAL 60°C (*) EN 50242	3	PANS AND DISHES WITH NORMAL DIRT	30	COLD	60°C	1	65°C	YES	80'	18	1,4
ECONOMY 60°C	4	DISHES WITH LIGHT DIRT	30	—	60°C	1	65°C	YES	76'	14	1,38
RINSE	5	DISHES FOR RINSING AND DRYING	—	—	—	1	65°C	YES	45'	9	0,8

Only run the soak program with half loads.

(*) Reference program as per EN 50242 standard.

(—) Not present.

(1) Average power consumption with the softener set on **level 2**.

(2) The cycle duration and power consumption may vary according to the water and room temperatures, and the type and amount of dishes.




The washing cycle will not take place if the dishwasher door is left open or not properly closed.



TABLE FOR CERTIFICATION BODIES

Reference standard	EN 50242
Reference program	(*) Selector on 3
Load	12 place-settings
Type of detergent	B
Amount of detergent	30 g
Rinse aid setting	Depending on the model 3/4 or 4/6

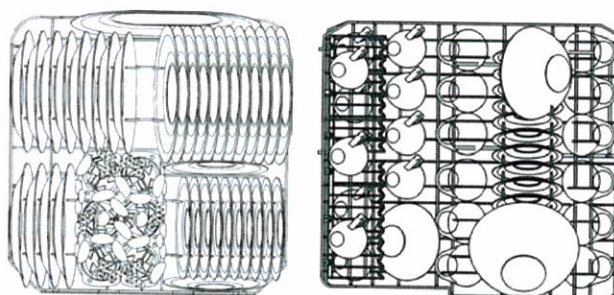


EN 50242

3.2 Washing programs



Before starting a washing program make sure that:

- The water supply tap is **open**.
- The **correct amount of detergent** has been added to the **dispenser**.
- The baskets have been **correctly loaded**.
- The spray arms are able to **rotate freely** and without obstruction.
- The dishwasher door is **securely closed**.

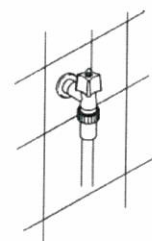

CANCELLING THE CURRENT PROGRAM

To cancel the program in progress the dishwasher must be switched off by pressing the **ON/OFF** key (3) (see section "3. Description of the controls").

Turn the program selector to **SOAK** and wait for the dishwasher to start. On completion of the program, switch off the dishwasher by pressing the **ON/OFF** key (3).

CHANGING THE PROGRAM

To change the program in progress the dishwasher must be switched off by pressing the **ON/OFF** key (3) (see section "3. Description of the controls").

Turn the program selector to the program required and then switch the dishwasher on again by pressing **ON/OFF** key (3). The dishwasher will carry out the new program automatically.

PROGRAM DELAY

The start of the washing program can be delayed by **from 1 to 12 hours**. This allows you to operate the dishwasher at the time of day most convenient to you.

Using the **DELAYED START** switch (7) (see section "3. Description of the controls") set the "delay" required by setting the pointer against the number indicating the hours. Then carry out the usual program setting procedures.

CAUTION: always turn the switch clockwise.



TO SAVE ON ENERGY! ... AND PROTECT THE ENVIRONMENT

- Always try to run the dishwasher **fully loaded**.
- Do not wash the dishes in running water.
- Use the washing program that is **most appropriate** for each type of load.
- Do not carry out any preliminary rinsing.
- If available, connect the dishwasher to a hot water supply up to 60°C.
- When possible, **disable the drying cycle** and leave the door open at the end of the washing cycle: the residual air and heat will dry the dishes perfectly.

TO CUT DOWN ON DETERGENT CONSUMPTION! ... AND PROTECT THE ENVIRONMENT

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following:

- **separate** the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures;
- **do not pour** the detergent directly on the dishes.



If it is necessary to open dishwasher door during the washing cycle, there will be a **1-minute delay** before the program can be resumed. After correctly closing the door, the washing program will start again from where it was interrupted.

This operation may negatively affect the progress of the washing cycle.

END OF CYCLE

At the end of the washing program the selector will be on one of the **STOP** markers, depending on the program carried out. Switch off the dishwasher by pressing the **ON/OFF** key **(3)** (see section "3. Description of the controls").

REMOVING THE DISHES

At the end of the washing program, wait at least **20 minutes** before removing the dishes, to allow them to cool down. To prevent any water droplets on the upper basket from falling on the dishes in the lower basket, it is **advisable** to unload the lower basket first, and then the upper basket.