


BOSCH WASHING MACHINE OPERATION

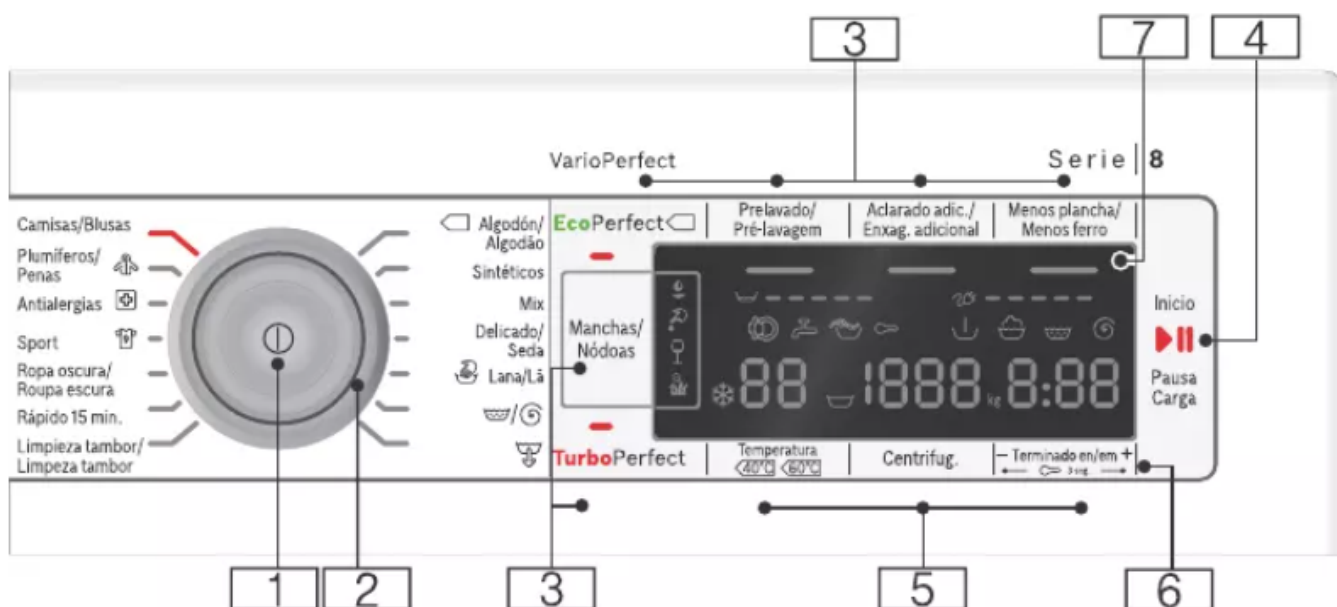

Note: All the buttons are sensitive (except for the main switch) and only need to be pressed lightly.

1 Main switch

for switching the washing machine on and off:
Press the ① button.

2 Programme selector

for selecting a programme.
Overview of programmes
→ Page 15

3 Additional programme settings:

→ Page 22

- TurboPerfect,
- EcoPerfect,
- Prewash (Prelavado / Pré-lavagem),
- Rinse Plus (Aclarado adic. / Enxag. adicional),
- Easy-Iron (Menos plancha / Menos ferro),
- Anti-Stain System (Manchas / Nódos)

4 Start/Pause button for:

- Starting a programme
- Interrupting a programme, e.g. to add items of laundry
→ Page 26
- Cancelling a programme
→ Page 27

5 Changing the default programme settings: → Page 21

- Temperature (Temperatura),
- Spin speed (Centrifug.),
- Finished in time (Terminado en/em)

6 Childlock (∞ 3 seg.)

to prevent the set functions from being changed accidentally:
Press and hold the **Finished in** (Terminado en/em) + and - buttons at the same time for approx. 3 seconds to activate this function. → Page 26

7 Display panel for settings and information. → Page 12

Display panel



Default programme settings:

- 1** **Temperature** in °C
 ❄ - 90 (❄ = cold)
- 2** **Spin speed** in rpm,
 🪣, 0 - 1600*;
 * Max. spin speed, depending on the selected programme and model,
 ■ 0 = no spin cycle, draining only → *Page 21*,
 ■ 🪣 = Rinse Stop → *Page 21*
- 3** **Finished in time**
 e.g. 2:30;
 Programme duration depends on the programme selection in h:min (hours:minutes),
 ■ **Preselection of end time**
 1 - 24 h;
 Programme ends after ... h (h = hours),
 ■ **Load recommendation**
 e.g. kg 9*;
 * depending on the selected programme
- 4** **Information on energy and water consumption:** → *Page 8*
 ■ 🪣 📊 Water consumption display,
 ■ ⚡ 📊 Energy consumption display

Further information

🧴 🧴 🧴 Anti-Stain System (Manchas / Nódos) → *Page 23*

Programme progress:

🪣	Prewash
🪣	Washing
🪣	Rinse
🌀	Spin
- 0 -	Programme end
🪣	Programme end during Rinse Stop
- P -	Pause, e.g. to reload laundry

Washing machine door:

🔦	The washing machine door can be opened.
🔦	When the programme has started: The washing machine door is not closed properly.

Tap:

🚰	Tap not turned on, no water pressure
🚰	Water pressure too low (may increase the programme duration)

Childproof lock: → *Page 26*

🔒	Childproof lock activated
🔒	Childproof lock activated, programme selector adjusted

Foam detection:

🧼	→ <i>Page 26</i>
🔦	lights up

Fault display:

E: - -	→ <i>Page 33</i>
--------	------------------

Signal setting:

0 - 4	→ <i>Page 28</i>
-------	------------------

Switching off the appliance automatically:

On OFF	→ <i>Page 8</i> , → <i>Page 28</i>
--------	------------------------------------