






# FISHER AND PAYKEL DISHWASHER OPERATION

1. Ensure door is closed.
2. Turn power on with  button.
3. Select mode using  button.
4. Select wash modifier using  button.
5. To start immediately, press  button once without holding down.
6. To use start delay, press and hold down  button until desired delay time is displayed.