


SMEG DISHWASHER OPERATION

1. Ensure the dishwasher door is closed.
2. For each step, hold down button for 3 seconds.
3. Press power button.
4. Press forward arrow button (▶||) to select mode.
5. Press forward arrow button (▶||).

DESCRIPTION OF THE CONTROLS

3.1 Front panel



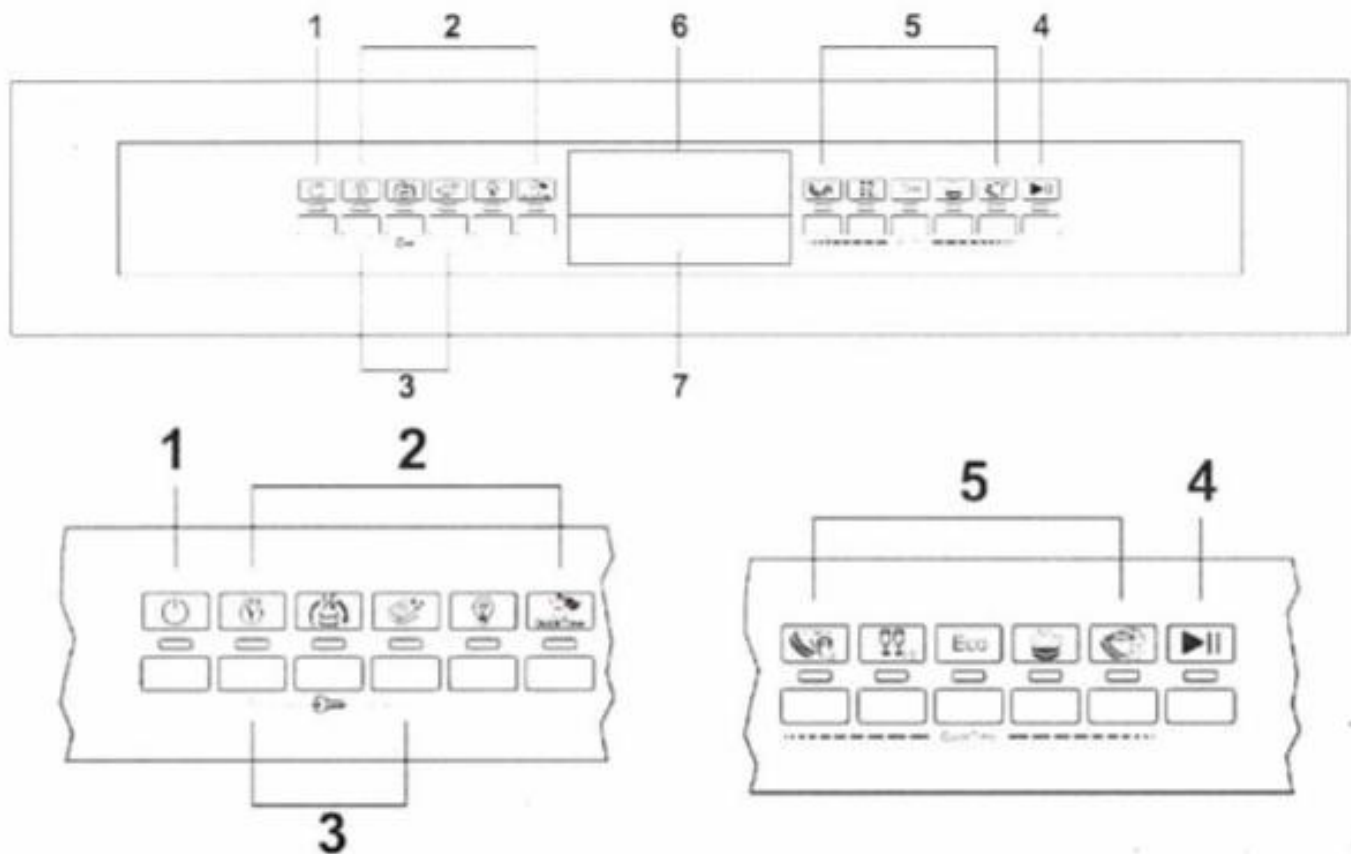



All the dishwasher controls are grouped on the front panel. Programming and option selection are only possible with the **door closed**.



1. **ON/OFF** button and warning light
2. **OPTION SELECTION** buttons and warning lights
3. **CHILD LOCK** activation buttons
4. **START/ PAUSE** button
5. **PROGRAM SELECTION** buttons
6. Information display
7. Handle to open the door

SMEG DISHWASHER OPERATION

PROGRAMS TABLE

PROGRAMME NUMBER & SYMBOL	LOAD CROCKERY AND CUTLERY	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			MINUTES (1)	WATER LITRES	POWER kWh (1)
 1 RAPID 27' 	Dishes with light dirt, washed immediately after use	Wash at 38°C Rinse at 50°C	27	6,5	0,70
 2 NORMAL ECO (*)	Crockery and cutlery normally soiled	Cold prewash Wash at 50°C Rinse at 40°C Dry	142	9,7	0,65
 3 ECO Eco	Dishes with normal dirt, even with dried-on residues.	Wash at 55°C Cold rinse Rinse at 70°C Dry	100	11	1,30
 4 AUTO 60-70 Auto 60°-70°	Pans and dishes with normal dirt, even with dried-on residues.	When the "AUTO" program is selected, the dishwasher recognises the type of dirt and automatically adjusts the washing parameters as appropriate.			
 5 ULTRA CLEAN	Very dirty pans and dishes, even with dried-on residues.	Hot prewash Wash at 70°C 2 cold rinses Rinse at 70°C Dry	160	15,5	1,70