

SMEG OVEN OPERATION

1. Turn power on at wall switch near sink.
2. Select the mode of cooking from left turn dial. The most efficient setting for basic cooking is 11 O'clock.
3. Select temperature setting on right hand dial. The oven takes a while to heat up.

SMEG GRILL OPERATION

1. Select grill mode of cooking from left dial.
2. Select temperature.
3. Monitor closely to avoid burning.

SMEG grills only operate with the oven shut because of the fan system. The fan will stay on even after you have turned the oven off as it is part of the cooling down process.